

MAINTENANCE INTERVALS

Air Pump

	Frequency	Required time	Required tools	Spare part set
Replace pump head	If defect	5 minutes	screwdriver	• Pump head incl. pump tube Art. Nr.: 1700703920
Replace valve head washer	Depending on frequency of use, every six months or if defect	2 minutes	Veyhl Tool (2)	• Valve head washer Art. Nr.: 1700703930
Pressure gauge unit	If defect	30 minutes	Veyhl Tool (1), safety bit (4), slotted screwdriver, open-end wrench 10 and 17 mm	• Pressure gauge unit Art.Nr.: 1700703660
Protective glass	If defect	30 minutes	Veyhl Tool (1), safety bit (4), slotted screwdriver, open-end wrench 10 and 17 mm	• Protective glass Art. Nr.: 1700703650
Pump tube, metal coated	If defect	5 minutes	screwdriver	• Pump head incl. pump tube Art. Nr.: 1700703920

Tools

Clean tools	Every 2 months	10 minutes	Clean cloth, "WD-40", suitable cleaning detergent	
Replace tools	As required	30 minutes	Safety bit (4), open-end wrench 10 mm, Allen wrench 3 and 4 mm	• Open-end wrench Art. Nr.: 1700703810 • Allen wrench set Art. Nr.: 1700703820 • Torx screwdriver Art. Nr.: 1700703830 • Slotted screwdriver Art. Nr.: 1700703840 • Phillips screwdriver Art. Nr.: 1700703850 • Tire lever Art. Nr.: 1700703860 • Pump head cable Art. Nr.: 1700703870
Clean steel cables	As required	10 minutes	Clean cloth, suitable cleaning detergent	

Complete Station

Cleaning	As required	10 minutes	Clean cloth, suitable cleaning detergent	
Check screws	Every 3 months	2 minutes	Safety bit (4), open-end wrench 19 mm Alternative: Special tool for anti-theft nuts	
Check surfaces	Every 3 months	2 minutes	Visual inspection Safety bit (4), open-	
Replace saddle support bolts	If defect	30 minutes	end wrench 10 mm, Allen wrench 6 mm	• Saddle mount Art. Nr.: 1700703610